

## FITTING CONTINUED



07

Pull the side elastic straps through the back side channels.



08

Zip the bottom cover and push the slide into the small pocket at the edge of the cover.



**CRYE PRECISION™**

Made in the USA with US materials. If you have any comments, questions, or suggestions regarding our products, please contact us.

P.718.246.3838  
F.718.246.3833  
info@cryeprecision.com  
www.cryeprecision.com

P/N: LVS-CVA, LVS-CVB,  
LVS-CVC, LVS-CVD  
© CRYE PRECISION LLC.  
ALL RIGHTS RESERVED.



**LVS™ OVERT & COVERT COVERS**  
OPERATOR'S MANUAL

# FITTING THE COVER



01

Unzip the front bottom zipper. Fold the shoulder straps of the front ballistic panel to the inside and insert the ballistic panel.



03

Pull the flaps of the ballistic panel through the side opening of the cover and press the hook on the edge of the cover to the loop on the flap.




05

Unzip bottom of rear cover. Fold the shoulder straps of the back ballistic panel to the inside and insert the ballistic panel into the cover.



02

Pull the bottom edge of the cover over the sides of the ballistic panel.

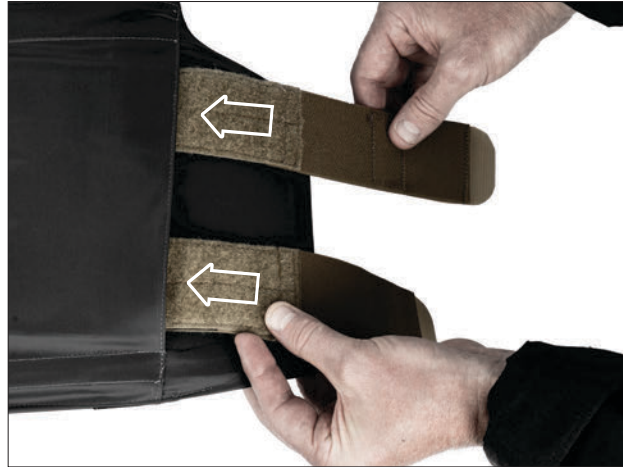

04

Insert and adjust the side straps that came with the cover to appropriate length. (See fitting side straps in Base Vest Manual)



06

Pull the bottom edge of the cover over the sides of the ballistic panel.